

Installation Guidelines

Flexi-Deck


Flexi-Deck Installation Guidelines

Tools & Materials


- Rubber Mallet
- Safe Utility Knife
- Pencil
- Tape Measure
- Straight Edge

Materials


- Flexi-Deck Tiles
- Flexi-Deck Female Edges
- Flexi-Deck Male Edges
- Flexi-Deck Corner Edges

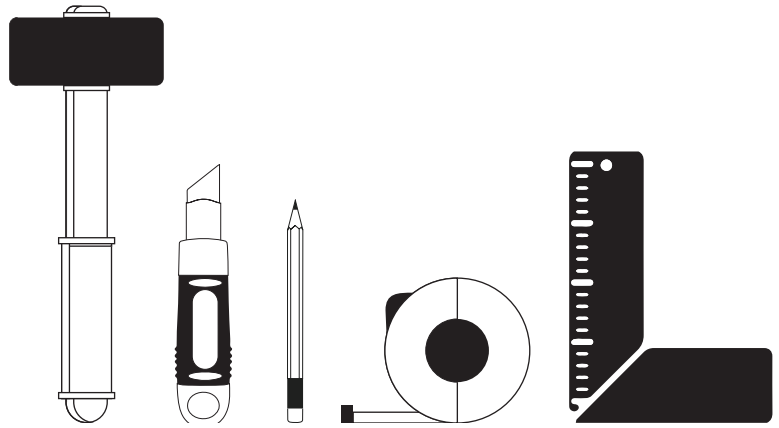


Flexi-Deck Tile

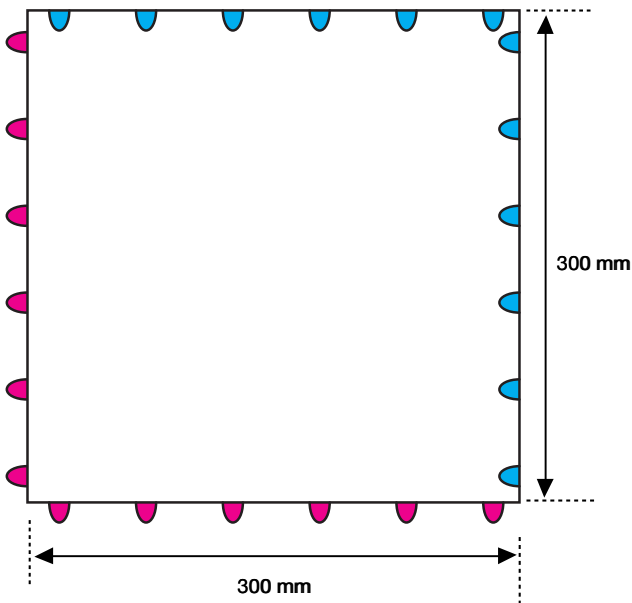


Female Edge

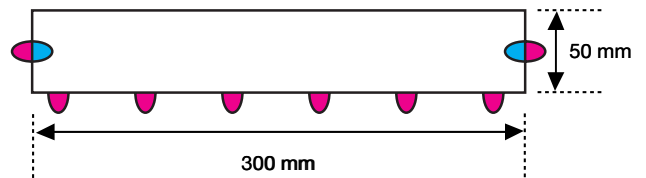

Male Edge



Corner

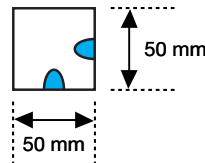

Preparation

For best results it is advised to install **Flexi-Deck** tiles on a level and clean floor. Simply follow these simple steps to achieve a durable, clean and adaptable flooring finish in your chosen area:



Clean

Sweep the existing floor to ensure that the surface is clean and free of dust and dirt.



Surface check


We recommend using a self-leveling repair compound in areas where there's variations in subfloor surface. If not addressed, floor tiles may 'dislocate' at the connection interlocks (The smoother the subfloor is the more even and resilient your Flexi-Deck tiles will be).



Temperature


We advise that Flexi-Deck tiles are laid in areas that have an ambient temperature between 16°C-24°C **(Let the tiles acclimatise to the environment for at least 24-48 hours before laying).**

Configuration Examples

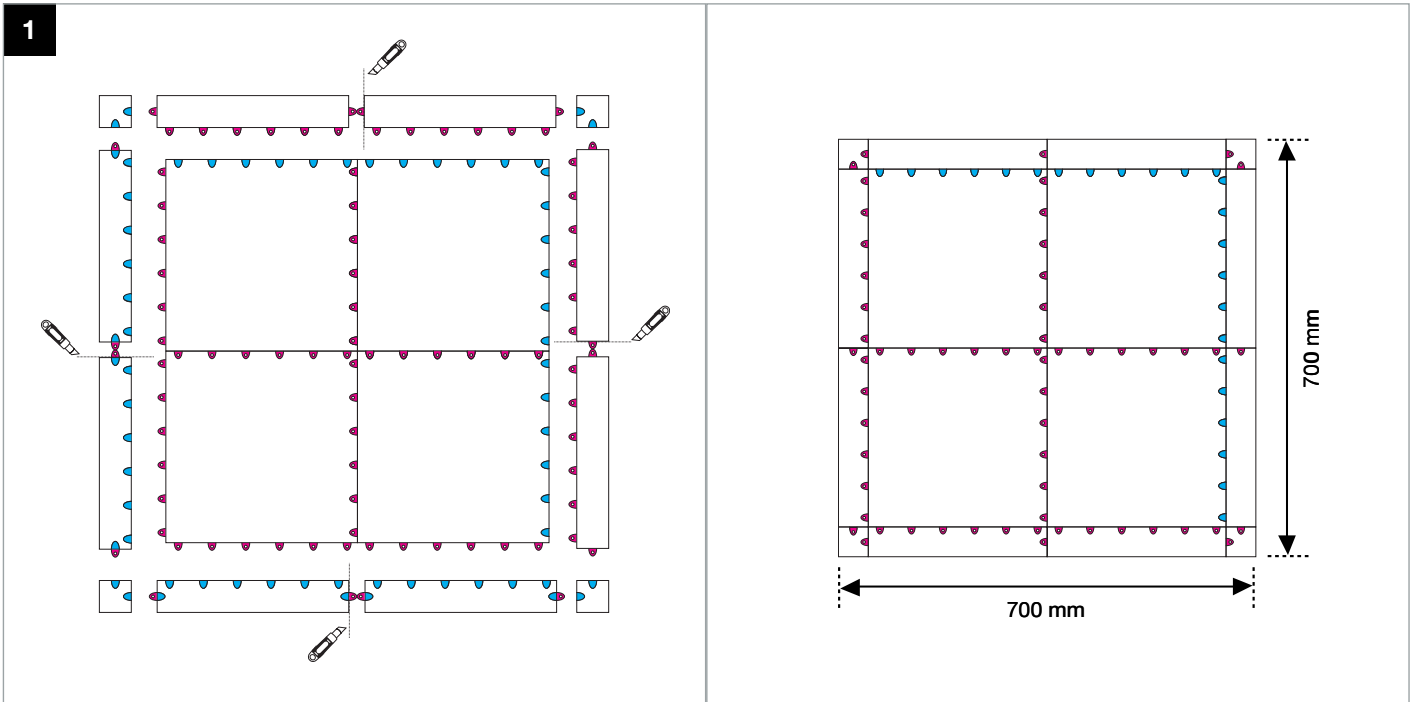

Example 1

- 4 x Flexi-Deck Tiles
- 4 x Female Edge (2 x Cuts)
- 4 x Male Edge (2 x Cuts)
- 4 x Corner Edge

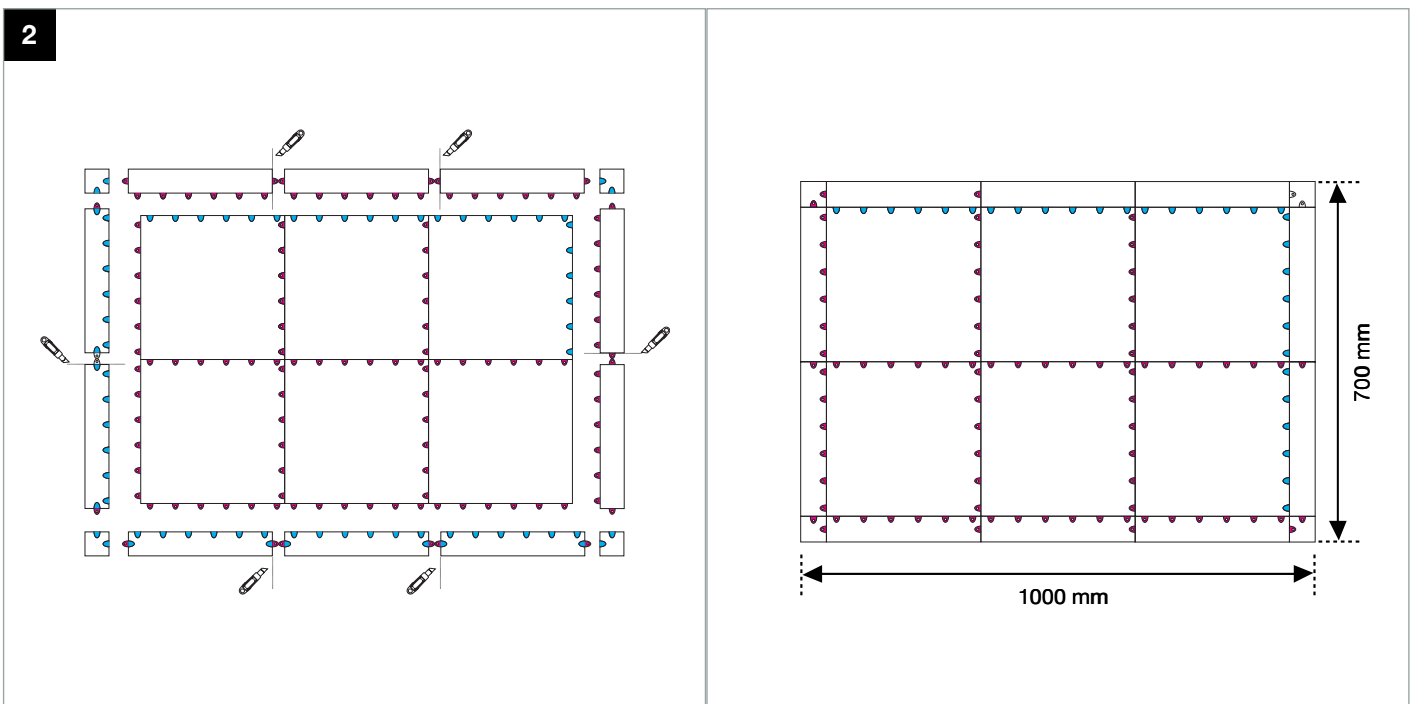

Example 2

- 6 x Flexi-Deck Tiles
- 5 x Female Edge (3 x Cuts)
- 5 x Male Edge (3 x Cuts)
- 4 x Corner Edge

MORE THAN JUST
MATTING